
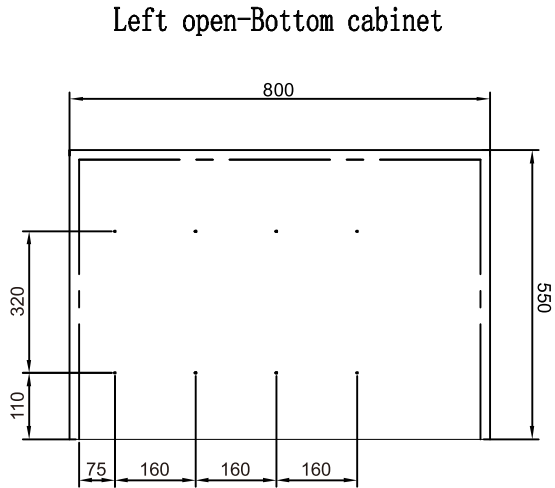



Soft close Show-hand Corner

Name	Photo	Qty
M6*16 hexagon screw		6
ST3.5*16 Screw		8
plastic spacer		2
“L”Screw handle		1
Deslizar cubierta		1
Handle		2


Step 1: As shown,Drill 8pcs $\varnothing 3.0\text{mm}$ holes on the bottom cabinet.

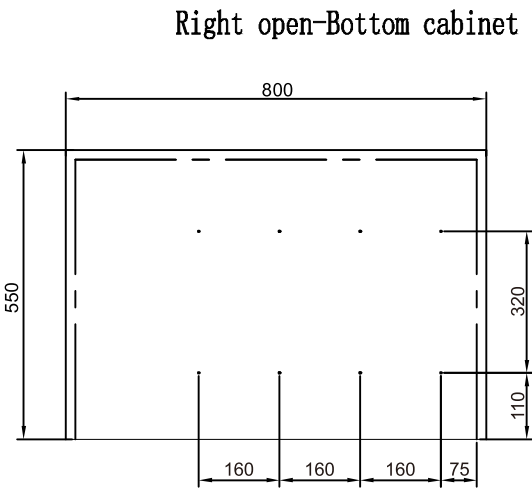



Step 2: Instal the frame base,and stick the plastic spacer on the frame as shown.

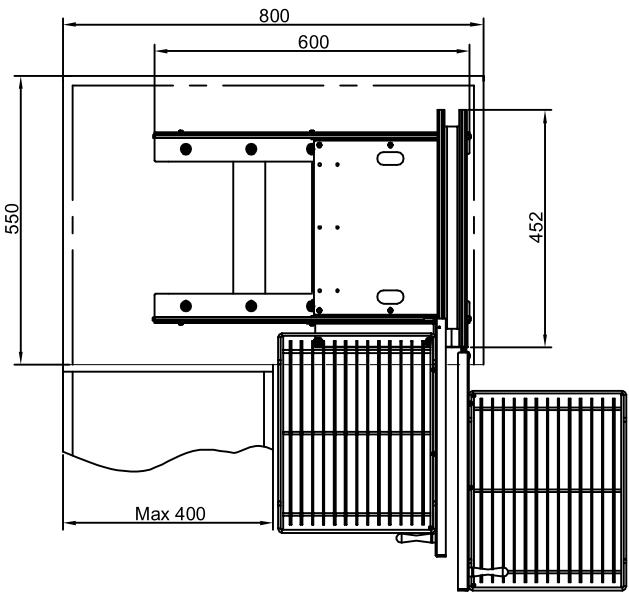

This drawing is right open,
left open is symmetry.

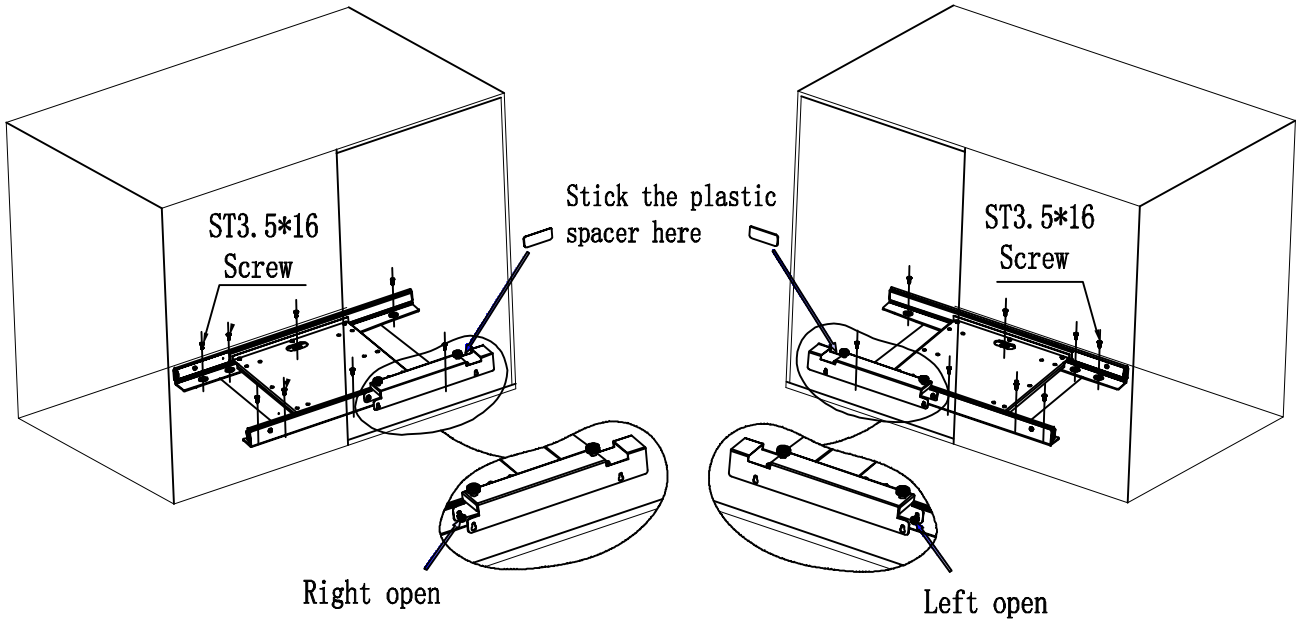

Step 3: Connect the frame and bottom base by hexagon screw.

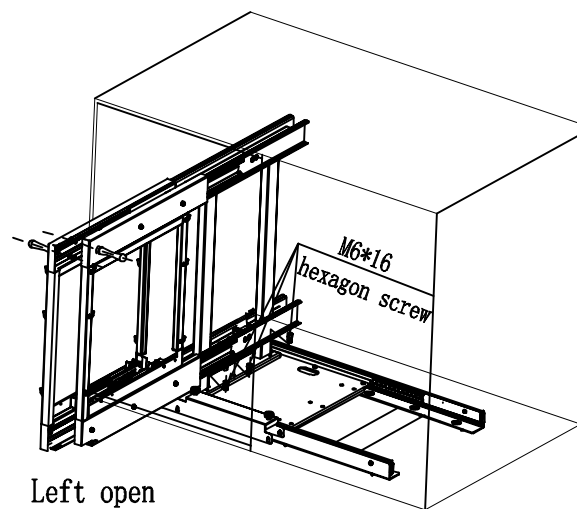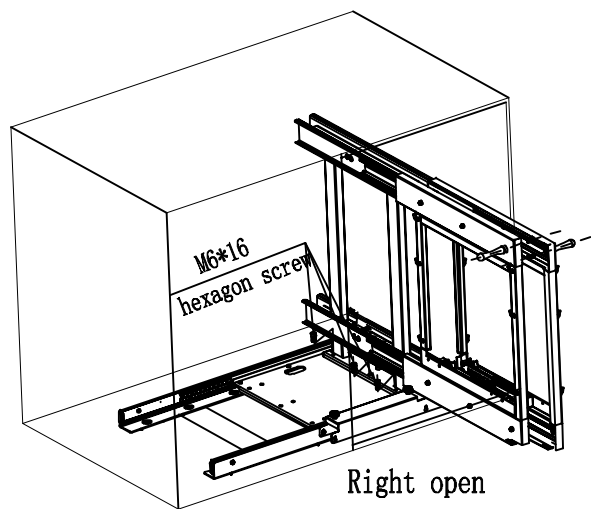

Step 4: Hang the baskets ,Finish.

