










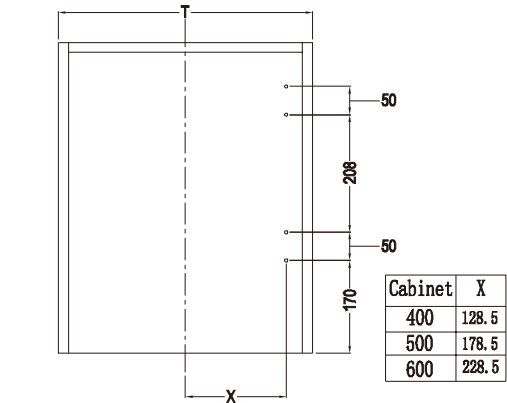
Tandem pantry unit installation instruction

Description	Picture	Quantity
U-iron		1
L-shaped bracket		1
Connecting strip		2
Runner protective cover		2
Runner		1 Pair
L-shaped iron		2
ST4.0*16tapping screw		16
ST3.5*25tapping screw		(Small basket amount*2)


Wood Basket

Description	Picture	Quantity
Basket pothook		Basket amount*4


Step 1: As the size revealed in the picture below,drill 4 small holes  $\varnothing 2.5\text{mm}$  respectively on top cabinet panel.



Step 2: As the size revealed in the picture below,drill 12 small holes  $\varnothing 2.5\text{mm}$  respectively on and bottom cabinet panel.

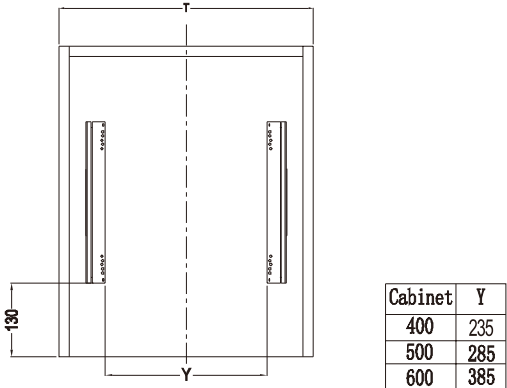

Step 3: Install L-shaped iron.

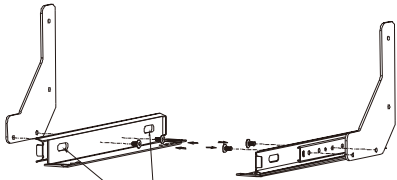


Tighten the screw though the hole

Step 4: Install slip frame.


A:Screw the loaded screws out of the slip frame,attach L-shaped bracket with castors into the frame tube as illustrated in the picture and screw up the screws but it is not necessary to tighten them.

B: Fix the frame installed in step A to the L-shaped iron sheets with 4 screws M6\*25.

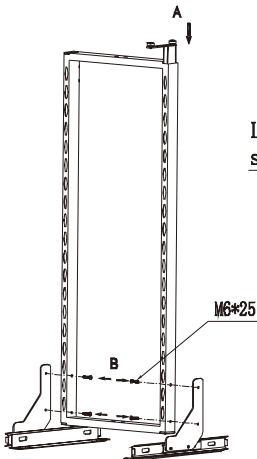


Loosen the screw

Step 5: Fix the runners onto the bottom frame panel with 12pcs tapping screws ST4.0\*16.

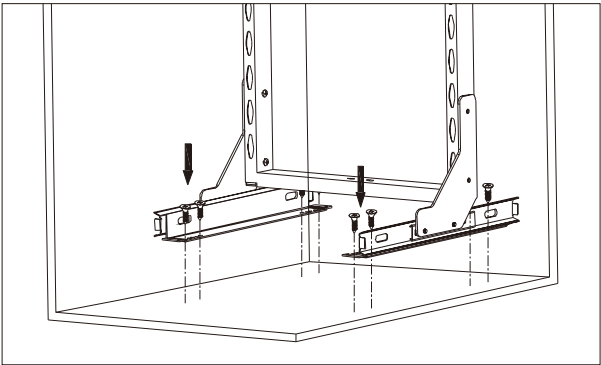


Step 6: Fix the U-iron onto the top cabinet panel with 4 tapping screws ST4.0\*16.

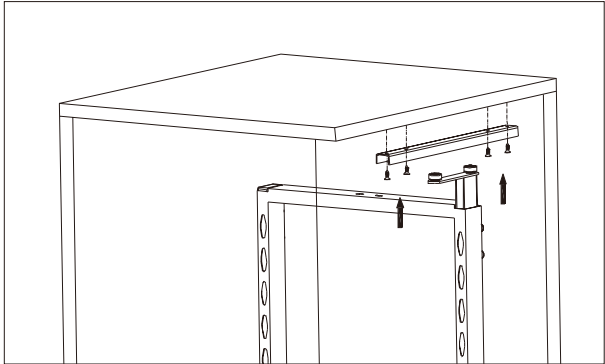


# Tandem pantry unit installation instruction

Step 7: Adjust the L-shaped bracket with castors, make sure the castors are put into the U-shaped slot completely and tighten the screws with a screw reamer.


Loosen the screw, then tighten the screws.

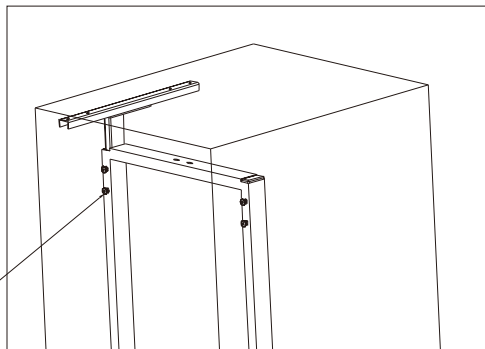

Step 8: Install the runner protective cover.

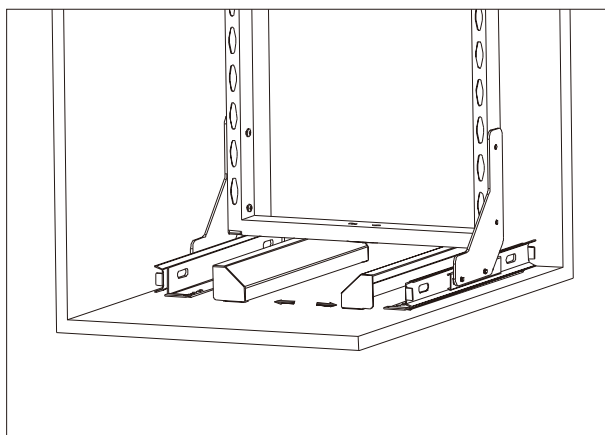


Step 9: Install panel hangstrip.

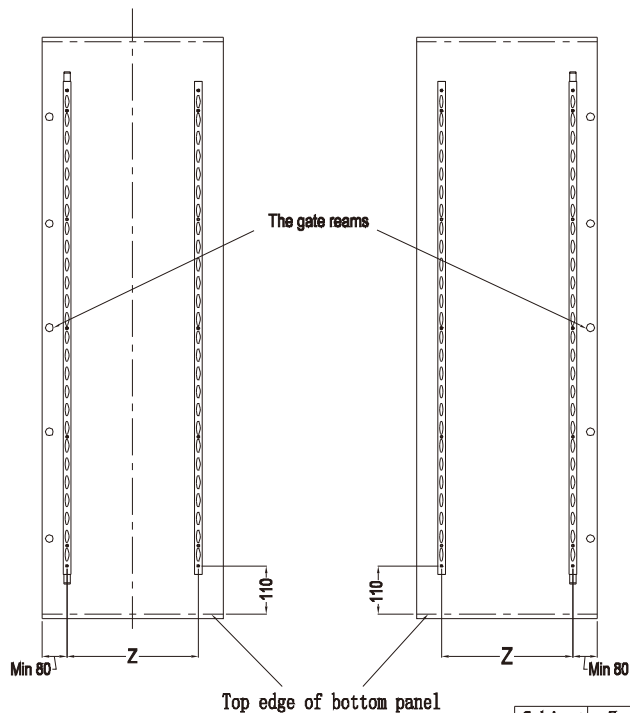

Cabinet	Z
400	263.5
500	315
600	415

Step 10: Install the Connecting strip .

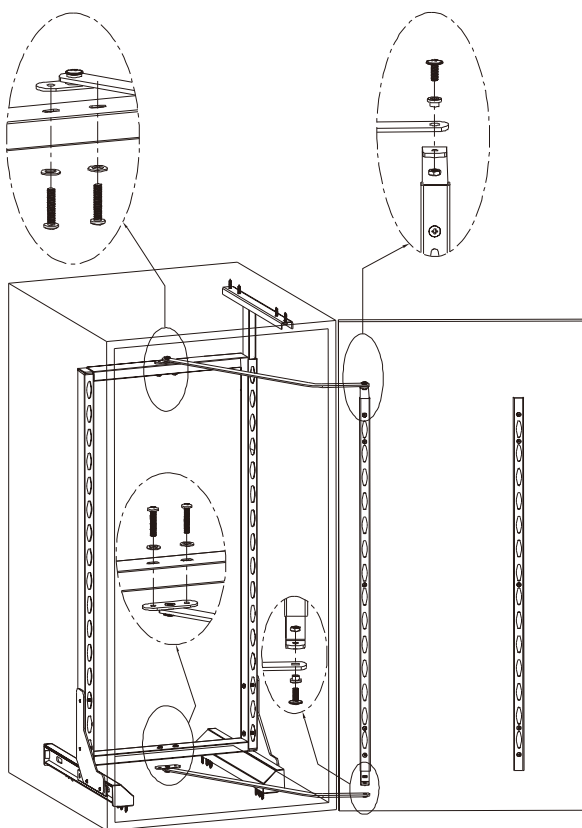

Step 11: Install the basket.

